
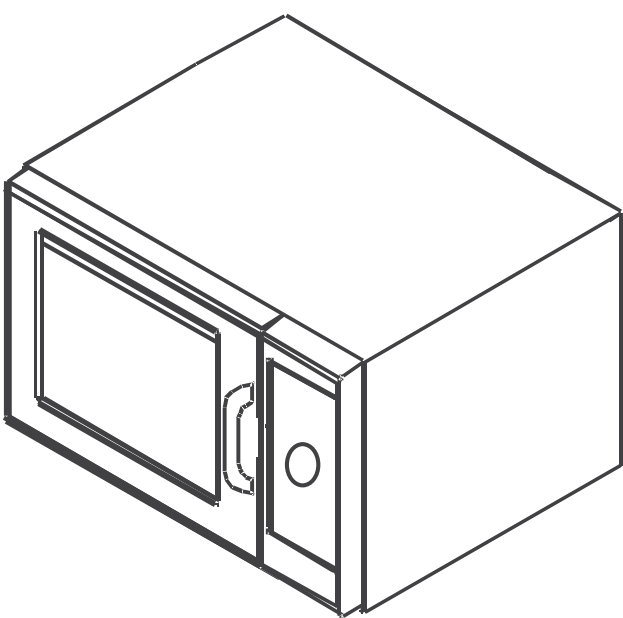


# Owner's Manual

## COMMERCIAL MICROWAVE OVEN

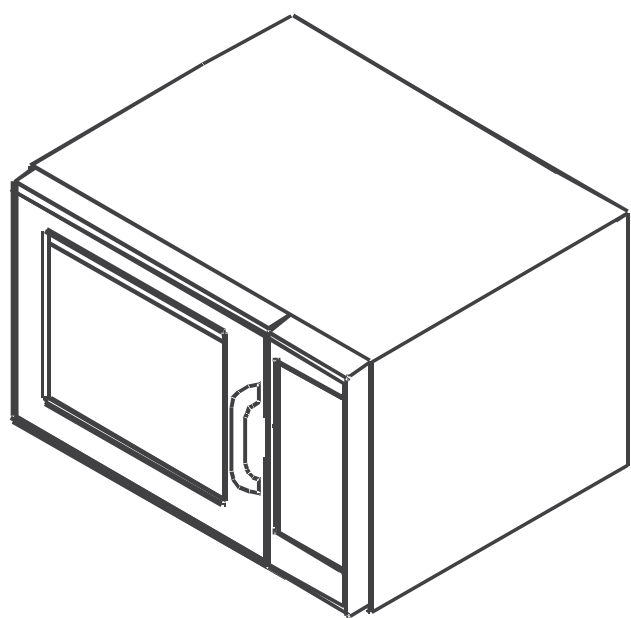

Keep these instructions for future reference. If the equipment changes ownership, be sure this manual accompanies equipment. Please refer to the SAFETY INSTRUCTIONS for important safety information prior to using this oven

### TABLE OF CONTENTS

|                                    |       |
|------------------------------------|-------|
| Important Safety Instructions..... | 2-3   |
| Grounding and Installation.....    | 4     |
| Touchpad Control Models            |       |
| Control Panel and Features.....    | 5     |
| Displays .....                     | 6     |
| Using the Oven Control .....       | 7     |
| Programming the Oven Control ..... | 8     |
| User Options.....                  | 9     |
| Dial Control Models                |       |
| Control Panel and Operation .....  | 10    |
| Cooking Guidelines.....            | 11-12 |
| Cooking Instructions.....          | 13    |
| Care and Cleaning.....             | 14-15 |
| Before Calling for Service.....    | 16    |

# IMPORTANT SAFETY INSTRUCTIONS

## RECOGNIZE THIS SYMBOL AS A SAFETY MESSAGE

### WARNING

To reduce the risk of burns, electrical shock, fire, or personal injury when using electrical equipment, basic safety precautions should be followed:

1. **READ** all instructions before using equipment.
2. **READ AND FOLLOW** the specific “**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**”.
3. This equipment **MUST BE GROUNDED**. Connect only to properly **GROUNDED** outlet. See “**GROUNDING/ EARTHING INSTRUCTIONS**”.
4. Install or locate this equipment **ONLY** in accordance with the installation instructions in this manual.
5. Some products such as whole eggs and sealed containers—for example, closed glass jars—are able to explode and **SHOULD NOT** be **HEATED** in this oven.
6. Use this equipment **ONLY** for its intended use as described in this manual. **DO NOT** use corrosive chemicals or vapors in this equipment. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
7. As with any equipment, **CLOSE SUPERVISION** is necessary when used by **CHILDREN**.
8. **DO NOT** operate this equipment if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This equipment, including power cord, must be serviced **ONLY** by qualified service personnel. Special tools are required to service equipment. Contact nearest authorized service facility for examination, repair, or adjustment.
10. **DO NOT** cover or block filter (if applicable) or other openings on equipment.
11. **DO NOT** store this equipment outdoors. **DO NOT** use this product near water – for example, near a kitchen sink, in a wet basement, a swimming pool, or a similar location.
12. **DO NOT** immerse cord or plug in water.
13. Keep cord **AWAY** from **HEATED** surfaces.
14. **DO NOT** let cord hang over edge of table or counter.
15. See door cleaning instructions on page 14. Cleaning and user maintenance shall not be made by children without supervision.
16. To avoid risk of fire in the oven cavity:
  - a. **DO NOT** overcook food. Carefully attend oven when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - c. If materials inside the oven ignite, keep oven door **CLOSED**, turn oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - d. **DO NOT** use the cavity for storage. **DO NOT** leave paper products, cooking utensils, or food in the cavity when not in use.
17. For commercial use only.
18. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of any cover which gives protection against exposure to microwave energy.
19. If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
20. Appliance is not to be used by children 8 years and below or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
21. Children being supervised not to play with appliance.
22. Only use utensils that are suitable for use in microwave oven.
23. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
24. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
25. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
26. The appliance should not be cleaned with a water jet (for appliances intended to stand on the floor and which are not at least IPX5).
27. The appliance is **NOT** to be cleaned with water jet or steam cleaner.
28. Liquids or other foods must not be heated in sealed containers since they are liable to explode.
29. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- A. **DO NOT** attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- B. **DO NOT** place any object between the oven front face and the door too allow soil or cleaner residue to accumulate on sealing surfaces.
- C. **DO NOT** operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  1. door (bent)
  2. hinges and latches (broken or loosened)
  3. door seals and sealing surfaces.
- D. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS

## RECOGNIZE THIS SYMBOL AS A SAFETY MESSAGE

### CAUTION

To avoid risk of personal injury or property damage, observe the following safety instructions:

#### General Use:

1. **DO NOT** use regular cooking thermometers in oven. Most cooking thermometers contain mercury and may cause an electrical arc, malfunction, or damage to oven.
2. Never use paper, plastic, or other combustible materials that are not intended for cooking.
3. When cooking with paper, plastic, or other combustible materials, follow manufacturer's recommendations on product use.
4. **DO NOT** use paper towels which contain nylon or other synthetic fibers. Heated synthetics could melt and cause paper to ignite.
5. To avoid surface deterioration, keep the oven in a clean condition. Infrequent cleaning could adversely affect the life of the appliance and possible result in a hazardous situation.
6. Clean oven regularly and remove any food deposits.

#### Heating Foods and Liquids:

7. Liquids such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to persons:
  - a. **DO NOT** overheat the liquid.
  - b. Stir the liquid both before and halfway through heating it.
  - c. **DO NOT** use straight-sided containers with narrow necks.
  - d. After heating, allow the container to stand in the microwave for a short time before removing it.
  - e. Use extreme care when inserting a spoon or other utensil into the container.
8. **DO NOT** deep fat fry in oven. Fat could overheat and be hazardous to handle.
9. **DO NOT** cook or reheat eggs in shell or with an unbroken yolk using microwave energy. Pressure may build up and erupt. Pierce yolk with fork or knife before cooking.
10. Pierce skin of potatoes, tomatoes, and similar foods before cooking with microwave energy. When skin is pierced, steam escapes evenly.
11. **DO NOT** heat sealed containers or plastic bags in oven. Food or liquid could expand quickly and cause container or bag to break. Pierce or open container or bag before heating.
12. **DO NOT** heat baby bottles in oven.
13. Baby food jars shall be open when heated and contents stirred or shaken before consumption, in order to avoid burns.
14. Never use oven to heat alcohol or food containing alcohol as it can more easily catch fire if overheated.

#### Additional Microwave Oven Safety Instructions:


15. **DO NOT** operate equipment without load or food in oven cavity.
16. Use only popcorn in packages designed and labeled for microwave use. **Popping time varies depending on oven wattage. DO NOT** continue to heat after popping has stopped. Popcorn will scorch or burn. **DO NOT** leave oven unattended.
17. **DO NOT** use metal utensils in oven.
18. **DO NOT** use aluminum foil in oven
19. To avoid pacemaker malfunction, consult physician or pacemaker manufacturer about effects of microwave energy on pacemaker.
20. An authorized servicer **MUST** inspect equipment annually. Record all inspections and repairs for future use.

## SAVE THESE INSTRUCTIONS

# Grounding and Installation

## Grounding/Earthing Instructions

**Oven MUST be grounded.** Grounding reduces risk of electric shock by providing an escape wire for the electric current if an electrical short occurs. This oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. Consult a qualified electrician or servicer if grounding instructions are not completely understood, or if doubt exists as to whether the oven is properly grounded.



### Do NOT use an extension cord.

If the product power cord is too short, have a qualified electrician install a three-slot receptacle. This oven should be plugged into a separate circuit with the electrical rating as provided in product specifications (available on Culitek's website at [culitekequipment.com](http://culitekequipment.com)). and the oven's serial plate / rating label. When the oven is on a circuit with other equipment, an increase in cooking times may be required and fuses can be blown.

### EXTERNAL EQUIPOTENTIAL EARTHING TERMINAL (export only)

Equipment has secondary earthing terminal. Terminal provides external earthing connection used in addition to earthing prong on plug. Located on outside of oven back, terminal is marked with symbol shown at right



## Installation

### Unpacking Oven

- Inspect oven for damage such as dents in door or inside oven cavity.
- Report any dents or breakage to source of purchase immediately.  
**Do NOT attempt to use oven if damaged.**
- Remove all packing materials from oven interior.
- If oven has been stored in extremely cold area, wait a few hours before connecting power.
- A protective film is used to prevent scratching of the outer case during transportation. Peel off the film from the exterior of the oven before installation.
- The warning label provided with the oven must be placed in a conspicuous location near the oven.

### Radio Interference

Microwave operation may cause interference to WiFi network, radio, television, or a similar oven. Reduce or eliminate interference by doing the following:

- Clean door and sealing surfaces of oven according to provided instructions.
- Place WiFi network, radio, television, etc. as far as possible from oven.
- Use a properly installed antenna on radio, television, etc. to obtain stronger signal reception.

### Oven Placement

- Do NOT install oven next to or above source of heat, such as pizza oven or deep fat fryer. This could cause oven to operate improperly and could shorten life of electrical parts.
- Do NOT block or obstruct oven filters. Allow access for cleaning.
- Install oven on level counter-top surface.
- Outlet should be located so that plug is accessible when oven is in place.

### OVEN CLEARANCES

- A. Allow at least 2" (5.1 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.
- B. There is not an installation clearance requirement for the back of the oven.
- C. Allow at least 1" (2.54 cm) of clearance around sides of oven.
- D. Install oven so oven bottom is at least 3 feet (91.5 cm) above floor.


## WARNING

To avoid risk of electrical shock or death, this oven must be grounded and plug must not be altered.

## WARNING


### Excessive Weight Hazard

Use two or more people to move and install oven. Failure to do so can result in back or other injury

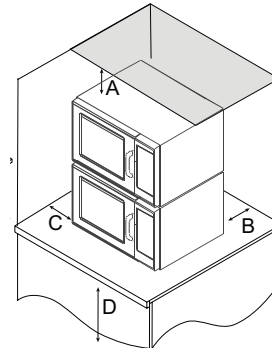

### OVEN STACKING


- Oven stacking is allowed using stacking bracket located on oven back panel top hinge side corner.
- Using stacking brackets on back panel of ovens remove screws from stacking brackets and reattach them to back panel between both ovens securing them together using back panel screws.

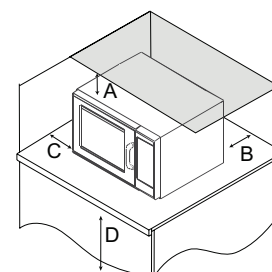

# Control Panel and Features (Touchpad Control Models)

## Control Panel Features

- (A) **DISPLAY**
- (B) **HOLD KEYPAD**
- (C) **20% POWER/DEFROST KEYPAD**
- (D) **50% POWER KEYPAD**
- (E) **70% POWER KEYPAD**
- (F) **MANUAL TIME ENTRY MODE**  
Allows the operator to heat without changing the preset program keypads.
- (G) **STOP/RESET KEYPAD**  
Interrupts operation, and/or exits modes.
- (H) **START/OK KEYPAD**  
Begins cooking in Manual Time Entry Mode. Restarts an interrupted cooking cycle. Used to save settings and entries.
- (I) **X2 - DOUBLE QUANTITY COOKING**  
Increases a preset cook time by a percentage of the original cook time, also known as a COOK FACTOR. Used for cooking multiple servings of foods.
- (J) **NUMBER KEYPADS**  
Used to operate preset cooking programs; enter settings; and/or activate secondary keypad functions.
- (K) **SECONDARY FUNCTION KEYPADS**  
To activate, press and hold corresponding number keypad.
  - (i) **Programming Mode** (keypad "1")  
Edit preset programs and/or create new programs for customized cooking.
  - (ii) **User Options** (keypad "2")  
Allows the user to customize various oven settings.

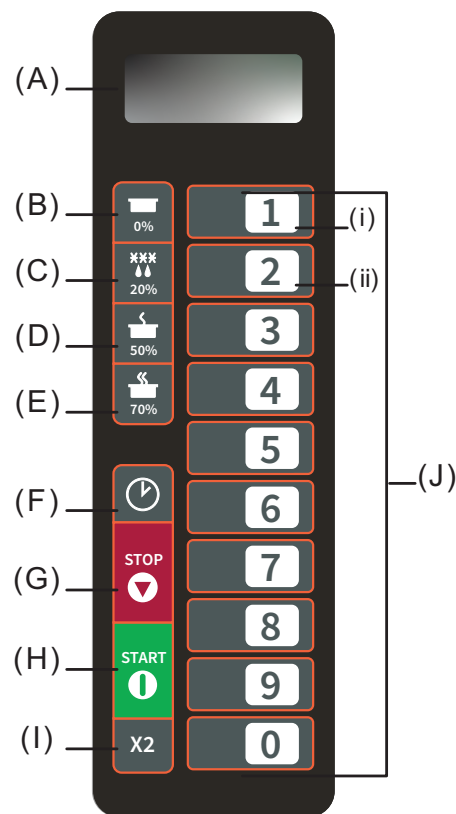

## Programming Features

### STAGE COOKING

Allows operator to use up to four different cooking cycles or stages consecutively without repeated input from the operator. For example, stage cooking could be set to defrost food initially, then cook it, and then keep the food warm until serving time.

### PRESET PROGRAM KEYPADS

Oven can store between 10 to 100 cooking programs in memory.

#### A. Single Digit Keypad Cooking

From the factory, the oven is programmed to store 10 cooking programs (0-9). Each keypad begins a cooking program.

#### B. Double Digit Keypad Cooking

The oven control can be changed to store up to 100 cooking programs (00-99). Each entry will be assigned a double digit number, for example 01, 05, or 20. When using the double keypad programming, two keypads must be pressed to start the cooking cycle.

**Note:** To set control to Double Digit Entry, see "User Options" section in this manual

## Methods of Cooking & Programming

### COOKING WITH PRESET PROGRAM KEYPADS

Allows operator to quickly activate saved cooking sequences using 1-2 keypad strokes

### MANUAL TIME ENTRY COOKING

Allows operator to heat without changing the preset program keypads

### MANUAL KEYPAD PROGRAMMING

Allows operator to use keypads to edit preset programs and/or create new programs for customized cooking.

The switching operation of this microwave oven can cause voltage fluctuations on the supply line. The operation of this oven under unfavorable voltage supply conditions can have adverse effects. This device is intended for the connection to a power supply system with a maximum permissible system impedance  $Z_{max}$  of **0.10 Ohms** at the interface point of the user's supply. The user has to ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

# Displays (Touchpad Control Models)

## Cooking Displays

| DISPLAYS                                     | DESCRIPTION  |
|--|--|
| READY  | "Ready" Displays when oven control will accept entries   |
| 00:00  | Displays cooking time. If stage cooking is programmed, total cooking time is displayed.                      |
| HOLD 0%<br>DEFR 20%<br>MED 50%<br>MED HI 70% | Displays the current microwave power level. If no display is shown, the oven is running at full power (100%) |
| POWER  | "Power" Displays while the oven is generating microwave energy during a cooking cycle.                       |

## Programming Displays


| DISPLAYS          | DESCRIPTION  |
|-------------------|--|
| P:0               | Displays when oven enters programming mode for single digit keypad memory only.  |
| P                 | Displays when oven enters programming mode for double digit keypad memory. 2 keypads must be pressed to enter a program.   |
| OP:--             | Displays when oven is in user option mode. User options can then be set or specified.  |
| CF:               | Displays with a numerical cooking factor when the X2 keypad is pressed. Cooking Factor is the percentage by which cooking time increases when using X2 keypad to cook multiple portions. (1=10%, 2=20%, 3=30%, etc.) |
| P:-- <sup>1</sup> | Displays briefly when programming a specific cooking stage. Number (1 through 4) indicates the stage that is being programmed.   |

The display is used for many different models of microwaves. Depending on the model, certain words or symbols may never be highlighted or become visible.

## General Displays

### READY

Ready displays when an oven control will accept entries.

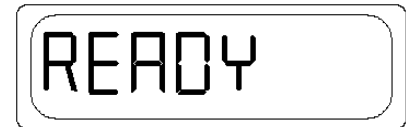

### COOKING DISPLAYS

33:33 displays total cooking time. When more than one cooking stage is programmed, total time for all stages displays. COOK displays when oven is operating. DEFROST 20%, MEDIUM 50%, or MED-HI 70% will display to indicate microwave power level being used. HOLD 0% does not display COOK. If oven power level is set to 0%, oven does not heat for programmed time. If no power level is displayed, the microwave is operating at 100% power.





# Using the Oven Control (*Touchpad Control Models*)

## **Interrupting Operation**

Open oven door or press STOP/RESET key to interrupt operation. Display continues to show countdown time. Close door and press START key to resume oven operation.

## **QTY X2 Key**

To increase cooking time by a specific cooking factor when cooking more than one serving. The cooking factor is a percentage of the original cooking time (from 10 to 100%).

1. Open oven door and place food in oven. Close door.
  - READY displays. Fan and light will turn on.
2. Press X2 key.
  - Amount of time added is a percentage of the original preprogrammed cooking time.
  - The percentage can be changed. See Programming the Oven Control section in this manual.
3. Press desired preprogrammed key or key sequence.
4. Oven begins cooking. Displayed cooking time is the total of original cooking time plus the added X2 time.

### FACTORY PRESET PROGRAMS

| KEYPAD | TIME      | POWER |
|--------|-----------|-------|
| 1      | 10 sec.   | 100%  |
| 2      | 20 sec.   |       |
| 3      | 30 sec.   |       |
| 4      | 45 sec.   |       |
| 5      | 1:00 min. |       |
| 6      | 1:30 min. |       |
| 7      | 2:00 min. |       |
| 8      | 3:00 min. |       |
| 9      | 4:00 min. |       |
| 0      | 5:00 min. |       |

Factory setting may vary by model

## **Manual Time Entry**

To cook food using a specific entered time and power level.

1. Open oven door and place food in oven. Close door.
  - READY displays. Fan and light will turn on.
2. Press TIME ENTRY key.
  - READY and 0000 display.
  - If pad does not work, open and close oven door and try again.
3. Enter cooking time by using the numbered keys.
4. Press a power level key to change power level if desired.
  - POWER LEVEL displays with the power setting.
  - 00 indicates 0% microwave power, 20 indicates 20%, 50 indicates 50% and 70 indicates 70% microwave power. If a number is not displayed with POWER LEVEL the microwave is set to full power.
5. If stage cooking is desired, press TIME ENTRY key and repeat steps 3 through 4.
  - Display changes to cook time and power level for the next stage.
6. Enter cook time and power level as in steps 3 and 4.
  - To add another cooking stage press TIME ENTRY key again.
  - Up to four different stages can be programmed.
7. Press START key.
  - Oven operates and time counts down.
  - POWER, COOK LEVEL and cooking time display.
8. At end of cooking cycle oven beeps and shuts off.

## **Programmed Keys**

To cook food using keys preprogrammed with cooking sequences.

1. Open oven door and place food in oven. Close door.
  - READY displays. Fan and light will turn on.
2. Press desired key.
  - For **single key entry**, press only one key.
  - For **double key entry**, press the two keys, in order, of the double digit number for the desired cooking sequence.
  - To change single or double key entry option, see User Options section in this manual.
3. Oven begins to cook.
  - POWER, power level and total cooking time display. If power level does not display, microwave is cooking at full power.
  - For additional cooking time, press preprogrammed key again to begin cooking sequence again.
4. At end of cooking cycle oven beeps and shuts off.

# Programming the Oven Control (*Touchpad Control Models*)

## Programming Keys

Oven is shipped from the factory for single key programming. To change the oven default to allow double key programming, see *User Option* section. To change the amount of time or the power level for a preset key:

1. Open oven door.
  - READY displays.
  - If door is closed or STOP key is pressed before programming is complete, changes are discarded and microwave exits programming mode.
2. Press and hold key 1 for approximately 5 seconds.
  - This begins programming mode.
  - Microwave will beep and PROGRAM displays. Oven is in programming mode.
3. Press key to be reprogrammed.
  - Press two keys if reprogramming a double pad program.
  - Power level and cooking time display.
  - If power level does not display, microwave is set to full power.
4. Enter cooking time by using the number keys.
5. Press a power level key to change power level if desired.
6. Press START key to save new programming changes to the key.
  - PROGRAM displays.
  - If START is not pressed, changes will not be saved.
7. Press STOP/RESET key or close oven door to exit programming mode.



## Programming Multiple Stages

Stage cooking allows consecutive cooking cycles without interruption. Up to four different cooking cycles can be programmed into a memory key. To use stage cooking:

1. Follow steps 1 through 5 above.
2. Press TIME ENTRY key.
  - Display briefly shows the key number that is being programmed and the stage number to the upper right.
  - Display changes to cook time and power level for the next stage.
3. Enter cook time and power level as in steps 4 and 5 above.
  - To enter another cooking stage for that key, press TIME ENTRY key again.
  - Up to four different stages can be programmed.
4. Press START key to save new programming changes to the key.
5. Press STOP/RESET key or close oven door to exit programming mode.



## The display shows PROGRAM.

When set to single key or double key programming, the display will show PROGRAM when programming keys for single or double digit cooking sequences. To change the oven's default to allow either single key or double key programming, see the *User Option* section.



## Canceling Mistakes

If oven is not cooking, press STOP/RESET key to clear display. If oven is cooking, press STOP/RESET key once to stop oven, then again to clear display. If oven door is open and time shows in display, close oven door and press STOP/RESET key to clear display.



## QTY X2 Programming

This feature allows a preset percentage of original cook time, called a cooking factor, to be added to a cook sequence. To change the cooking factor:

1. Open oven door.
2. Press and hold key 1 for approximately 5 seconds.
3. Press key to be reprogrammed.
4. Press the QTY X2 key.
5. Press a numbered key to change the cooking factor.
  - Cooking factor can be set from 10% to 100%.
  - Default is 80%.
  - Key 5 would change the cooking factor to 50%.
  - Key 3 would change the cooking factor to 30%.
6. Press START key to save changes.



# User Options (*Touchpad Control Models*)

## Didn't like an option?

Factory settings are marked in bold.  
To change the oven back to the factory setting, simply select the option that is marked in bold.



## My changes weren't saved.

In order for any changes to be saved, the START key must be pressed after selecting an option. Shutting the oven door or pressing the STOP/RESET key will not save changes.

## Changing user options

Options such as single or double key programming, beep volume, and maximum cooking time can be changed to suit individual preferences.

To change options:

1. Open oven door.
  - If door is closed or STOP/RESET key is pressed before programming is complete, changes are discarded and microwave exits programming mode.
2. Press and hold key 2 for approximately 5 seconds.
  - This begins options mode.
  - Microwave will beep and OP: -- displays. Microwave is now in programming mode.
3. Press number key that controls option to be changed.
  - See table below for options.
  - Current option will display.
4. Press number key again to change the option.
  - Each time key is pressed, option will change.
  - Match number code displayed with descriptions for desired option.
5. Press START key to save changes.
  - OP: -- shows in display.
  - To change additional options, repeat steps 3 and 4.
  - Changes appear after door is closed or STOP/RESET pad is pressed.

2




| NUMBERED PADS                | DISPLAY                                 |   | OPTIONS (FACTORY SETTINGS IN BOLD)   |
|------------------------------|---|---|--|
|                              | CTFS MODELS                             | RCSC10TS MODELS                         |  |
| 1<br>End of Cycle Beep       | OP:10<br>OP:11<br>OP:12                 | OP:10<br>OP:11<br>OP:12                 | <b>3 second continuous beep</b><br>Continuous beep until door is opened<br>5 beep bursts until door is open  |
| 2<br>Speaker Volume          | OP:20<br>OP:21<br><b>OP:22</b><br>OP:23 | OP:20<br>OP:21<br><b>OP:22</b><br>OP:23 | Eliminates beep<br>Sets volume to low<br><b>Sets volume to medium</b><br>Sets volume to high   |
| 3<br>Key Beep                | OP:30<br><b>OP:31</b>                   | OP:30<br><b>OP:31</b>                   | Prevents beep when pad is pressed<br><b>Allows beep when pad is pressed</b>  |
| 4<br>Keyboard Enable Window  | OP:40<br>OP:41<br><b>OP:42</b><br>OP:43 | OP:40<br>OP:41<br><b>OP:42</b><br>OP:43 | 15 seconds after oven door is opened, keyboard disabled<br>30 seconds after oven door is opened, keyboard disabled<br><b>1 minute after oven door is opened, keyboard disabled</b><br>2 minutes after oven door is opened, keyboard disabled |
| 5<br>Add Time During Heating | OP:50<br><b>OP:51</b>                   | OP:50<br><b>OP:51</b>                   | Prevents adding heating time while oven is heating<br><b>Allows heating time to be changed while oven is heating when a memory pad is pressed</b>  |
| 6*<br>Reset to Ready Mode    | <b>OP:60</b><br>OP:61                   | OP:60<br><b>OP:61</b>                   | <b>Opening oven door does not reset oven back to ready mode</b><br>Opening oven door resets oven back to ready mode.   |
| 7*<br>Maximum Heating Time   | <b>OP:70</b><br>OP:71                   | OP:70<br><b>OP:71</b>                   | <b>Allows 60 minutes of heating time</b><br><b>Allows 10 minutes of heating time</b>   |
| 8<br>Manual Operation        | OP:80<br><b>OP:81</b>                   | OP:80<br><b>OP:81</b>                   | Allows use of preprogrammed pads only<br><b>Allows use of manual time entry and preprogrammed pads</b>   |
| 9<br>Double Digit Operation  | <b>OP:90</b><br>OP:91                   | <b>OP:90</b><br>OP:91                   | <b>Allows 10 (0-9) preprogrammd pads</b><br>Allows 100 (00-99) preprogrammed pads  |
| 0<br>Clean Filter Message    | OP:00<br><b>OP:01</b><br>OP:02<br>OP:03 | OP:00<br><b>OP:01</b><br>OP:02<br>OP:03 | Do not display message<br><b>Display message for 24 hours every 7 days</b><br>Display message for 24 hours every 30 days<br>Display message for 24 hours every 90 days   |

Factory setting may vary by model

# Control Panel and Operation *(Dial Control Models)*

## Control Panel Features

- (A) **LIGHT-UP TIME ENTRY DIAL**
- (B) **LIGHT-UP POWER LEVEL INDICATOR**
- (C) **20% POWER/DEFROST KEYPAD**
  - (i) *Secondary function: enable automatic reset feature*
- (D) **50% POWER KEYPAD**
- (E) **70% POWER KEYPAD**
- (F) **100% POWER KEYPAD**
  - (i) *Secondary function: disable automatic reset feature*
- (G) **EXAMPLE COOK TIMES**

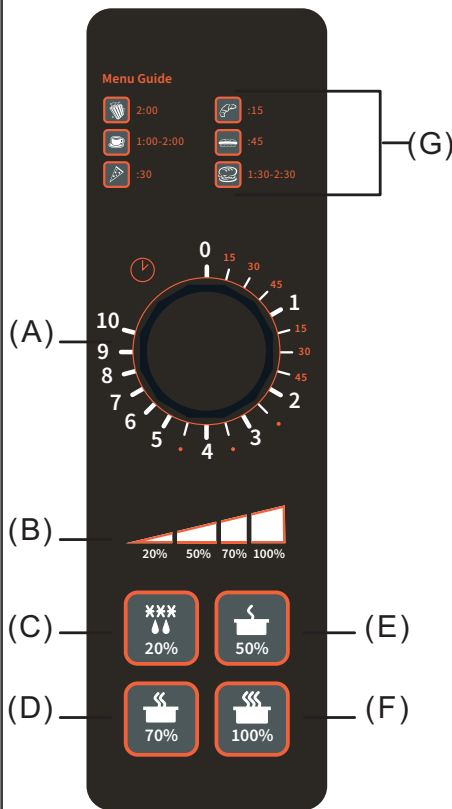

## Heating

To cook food using a specific entered time and power level.

1. Open oven door and place food in oven. Close door.
  - Fan and light will turn on.
2. Select desired power level or use default 100%
3. Turn time entry dial clockwise to desired time
4. Press a power level key to change power level if desired.
  - Cooking time can be set up to 10 minutes
  - Oven operates and time counts down.
5. At end of cooking cycle oven beeps and shuts off.



## Interrupting Operation

Open oven door to interrupt operation or turn time entry dial counterclockwise to "0". Oven will automatically reset cooking time to zero.

To resume microwave oven operation, close door, select power level pad, and turn dial.

## Changing Time and Canceling Mistakes

Heating time and power level can be changed at any time while the oven is operating. Press power level pad or turn dial to desired new setting.

To set cooking time to zero, turn dial counterclockwise to "0" or open and close oven door

## Changing Timer Automatic Reset Option

From the factory, the oven is programmed to automatically reset cooking time to zero whenever cooking cycle is interrupted. This feature can be disabled/enabled by the user.

To **disable** automatic reset to zero:

1. With door open press and hold the 100% pad for 5 seconds until beep is heard. Close the door
  - this changes timer setting to pause current cook time and power level when door is opened.



To **enable** automatic reset to zero:

1. With door open press and hold the 20% pad for 5 seconds until beep is heard. Close the door
  - this changes timer setting to reset timer to zero and power level to 100% when door is opened.



The switching operation of this microwave oven can cause voltage fluctuations on the supply line. The operation of this oven under unfavorable voltage supply conditions can have adverse effects. This device is intended for the connection to a power supply system with a maximum permissible system impedance  $Z_{max}$  of **0.20 Ohms** at the interface point of the user's supply. The user has to ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

# Cooking Guidelines

---

The Culitek Microwave Oven can make your job easier. You'll cook ahead and pre-portion more. You'll also spend less time preparing special-order dishes.

To be sure of consistently good results, you'll want to remember a few simple guidelines.

## Food Variables

Microwave cooking can be directly affected by different food variables.

The **shape** of foods can greatly affect the amount of cooking time. Foods that are flat and thin heat faster than foods which are chunky. For example, a casserole will cook faster in a flat dish, rather than if heaped in a small dish. Foods cut into small pieces will cook faster than large-shaped foods. Pieces should be of a uniform size and shape for more uniform cooking, or the smaller pieces will cook faster. The greatest amount of cooking takes place within 3/4" (1.9 cm) of the food's surface. The interior of large food items, or dense foods, is heated by the heat conducted from the outer food layer. The most uniform cooking occurs in flat, doughnut-shaped foods. For best results, cook foods together which have similar sizes and shapes.

The **quantity or volume** of a food can affect the amount of cooking time. As the volume of the food is increased, the time required to cook or heat the item increases almost proportionately. If twice the amount of food is placed in the oven, it will take almost twice as long to cook. To determine the time for larger quantities, multiply the individual serving time by the increased amount, then reduce the total cooking time by about 20%.

The **density** of foods can greatly affect the amount of cooking time. Porous foods, such as breads, cakes or pastries, will heat much more quickly than dense meats of the same size. Porous foods absorb microwaves quickly throughout. Meats absorb microwaves mostly at the exterior surface, and the interior is heated by conduction, increasing the cooking time. Meats can be cooked in a sauce, if desired. Due to the moisture content, a sauce will heat rapidly. The heat will transfer to the meat, so the meat will heat faster due to heat by conduction as well as by microwaves.

The **starting temperature** of foods affects the amount of cooking time. Each temperature degree that the food item is to raise must be supplied with a definite amount of energy. Lower initial starting temperatures require more energy and more time to cook. Therefore, refrigerator temperature foods require a longer cooking time than do room temperature foods. Foods already slightly warm will heat very quickly in the oven.

The **moisture content** of foods affects the amount of cooking time. The higher the moisture content is in a food the longer the amount of cooking time.

The **salt, fat, and sugar content** of foods affects the amount of cooking time. Foods containing high salt, fat, and sugar levels heat very quickly and may reach much higher temperatures than foods having low salt, fat, and sugar levels. Foods having lower salt, fat, and sugar levels require longer cooking times.

The **arrangement** of food within a microwave oven cavity affects the way in which the food cooks. A "round" arrangement is best. Use round utensils whenever possible. Also, arrange foods such as baked potatoes in a circle, rather than in rows, for cooking. When only one food item is being cooked, place it in the center of the oven glass shelf for cooking.

# Cooking Guidelines (continued)

## Manipulation of Foods

Sometimes recipes suggest manipulating or moving food during cooking. There are several forms of manipulation:

**Stirring** is required less often in microwave cooking than in conventional cooking. In conventional cooking, you use a spoon to move food up from the bottom of a pan to evenly distribute the heat. In microwave cooking, you still stir to redistribute the heat within some foods, but you need to stir from the outside of a dish toward the inside or center. If a recipe states to stir once or twice during cooking, stir at approximately even intervals. For example, in a 12-minute cooking period, if a recipe states to stir twice, stir after 4 minutes of cooking and again, after 8 minutes of cooking. However, it is not necessary to be precise. Stir only when necessary. When using lower power levels or settings, less stirring is required. Some examples of foods which may require stirring are puddings, some casseroles, some sauces, some soups, and some egg dishes. Some foods can't be stirred. These foods are rearranged or turned.

Some foods can't be stirred and should be **repositioned or rearranged** during cooking. Some examples include baked potatoes, cupcakes (in custard cups), chicken pieces, and others. Rearranging allows for more even cooking of foods. Foods which are cooked, covered, or which are cooked using lower power levels, usually require little rearranging.

There are actually **two types of turning**. Turning is done when foods cannot be stirred. Foods which are cooked, covered, or which are cooked at lower power levels usually require little turning.

**Turning foods over:** Turning foods over is done to distribute heat. Meat and poultry are two types of foods which are sometimes "turned over." Examples include roasts, turkeys and whole chickens. Small meat items such as poultry pieces may need to be turned over when in casseroles, or when in a browning skillet.

**Rotating or turning dishes:** There are a few foods which cannot be stirred, rearranged or turned over. Therefore, the actual cooking dish is turned or rotated. A half-turn means to grasp the dish and turn the portion of the dish that faces the oven door around, until it faces the back of the oven. Examples of foods which are sometimes turned or rotated in a cooking dish include cakes, quiches, or soufflés. When cooking foods at lower power levels or Settings, less turning of the cooking dishes is required.

## Microwave Utensils

Never use cooking containers or covers with any metal content. This includes all metal and enameled metal-core ware, foil, and metal-trimmed containers. Suitable cooking containers include those made of paper products, glass, china, cloth, and wicker baskets.

| RECOMMENDED         | NOT RECOMMENDED        |
|---------------------|------------------------|
| Glass/Ceramic       | Aluminum foil          |
| Natural fiber cloth | Grocery bags           |
| Non-recycled paper  | Recycled paper         |
| Plastic             | Lead crystal           |
| Wood                | Newspapers             |
|                     | Metal                  |
|                     | Metallic trimmed china |

### UTENSIL CHECK TEST

Use the following test to check utensils for microwave safeness.

1. Place glass measuring cup of water next to empty dish to be tested in microwave oven.
2. Heat on full power for one minute.
3. Check temperature of dish and water.
  - If dish remains cool and water is hot, dish is microwave safe.
  - If dish is slightly warm, use for short term cooking.
  - If dish is hot and water is cool, do not use. Dish remains cool if not absorbing microwaves and microwaves are being absorbed by water. Dish becomes hot if absorbing microwaves.

## Cooking Hints

**Cover foods for faster, more even cooking.** Glass lids, plastic wrap, plate covers or other paper products may be used. Do not seal. Instead, allow for steam-venting at all times.

**Pierce pouches, plastic wrap covers and all foods** with a thin skin or membrane, such as potatoes, squash, tomatoes, eggs, etc. This prevents an eruption in the oven and allows for expansion and/or the escape of steam.

**Foods should be carefully plated.** For best results, arrange food such as vegetables or casserole-type items evenly around the edge of the plate with slightly less depth in the center. The edges of food items should not overlap or overhang the rim of the container. Cover meats with gravy or au jus and moisten all dry foods other than bread or pastry items.

**Do not stack food or plated dishes in your oven.** Instead, when cooking more than one serving or platters, all plates should be placed at the same level in the oven, with space between all containers.

# Cooking Instructions

---

## Steaming Tips

### 1. **Cooking Vessels**

a. Always heat or cook food items in covered containers to accomplish:

- Retention of steam for efficient cooking and to keep foods moist
- Even cooking results and temperatures
- A cleaner oven interior and prevention of food splatters

b. Ceramic, paper, china, styrofoam, glass and plastic are suitable materials for use in microwave ovens.

A high temperature resistant amber pan is recommended for ALL items, especially those high in fat or sugar content, as these ingredients get hot very quickly.

### 2. **Food Temperature**

a. To reach a mandatory serving temperature, frozen foods require a longer cook time than refrigerated items.

b. Refrigerated items:

- Items stored at 40°F (4°C) in the refrigerator should be covered while heated; except breads, pastries or any products with a breaded coating, which should be heated uncovered to avoid softening.

c. Room temperature items:

- Foods held at room temperature, such as canned items or vegetables, will require less time to heat than refrigerated items.

d. Conventionally prepared foods should be slightly undercooked to prevent overcooking when rethermed by microwave steaming.

e. After a steaming cycle has been completed, internal food temperatures continue to slightly rise due to the presence of steam.

### 3. **Structure of Food**

a. Food items that are high in fat, sugar, salt and moisture attract and quickly absorb microwave energy, allowing for a shorter cook time.

b. Items high in protein or fiber require a longer cook time, due to a slower absorption of microwave energy.

### 4. **Quantity**

a. As the mass of food increases, so will the necessary cook time.

Refer to and comply with all USDA/FDA Food Code guidelines when cooking or heating food items.

# Care and Cleaning

Microwave energy is attracted to any food source in the oven. Food splatters or spills can affect heating performance, and can also cause oven damage. To prevent damage to oven, keep the microwave oven clean and remove any food debris. Follow the recommendations below for proper maintenance of oven.

## **WARNING: NOT FOLLOWING APPROVED OVEN CLEANING INSTRUCTIONS MAY VOID YOUR OVEN WARRANTY**

**⚠ Do NOT** use abrasive cleaners or cleaners containing ammonia, citrus, phosphates, chlorine, sodium or potassium hydroxide (lye). The use of caustic cleaning products or those containing ammonia, citrus, phosphates, chlorine, sodium or potassium hydroxide (lye) can damage critical oven parts.

Use of unapproved cleaning agents will void the terms of the warranty.

**⚠ Never** pour water into microwave oven bottom.

**⚠ Do NOT** use water pressure type cleaning systems.

**⚠ Do NOT** operate oven without the antenna shield and air filter in place.

**⚠ Never** turn on or operate oven during cleaning procedure. Always unplug oven before cleaning.

**⚠ The appliance is NOT** to be cleaned with water jet or steam cleaner.

## **⚠ WARNING**


To avoid electrical shock which can cause severe personal injury or death, unplug power cord or open circuit breaker to oven before cleaning.

Wear protective gloves and protective glasses when cleaning the oven.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

## Daily Care and Cleaning

### INTERIOR, EXTERIOR, AND DOOR

1. Unplug Oven 
2. Remove any food debris
3. Clean microwave oven with mild detergent in warm water using soft sponge or cloth. Wring sponge or cloth to remove excess water before wiping equipment.
4. If desired, boil a cup of water in microwave oven to loosen soil before cleaning.



### CONTROL PANEL



5. Open oven door to deactivate oven timer.
6. Clean with mild detergent in warm water using soft sponge or cloth. Wring sponge or cloth to remove excess water before wiping equipment.

### ANTENNA/SPLATTER SHIELD (CTFS12TS & CTFS18TS MODELS ONLY)

The antenna shield (or splatter/grease shield) is a vital part of the oven's design.

Clean the shield in place to prevent food splatter/debris from building up on the oven ceiling.

7. Unplug Oven 
8. Clean antenna shield with mild detergent in warm water using soft sponge or cloth. Wring sponge or cloth to remove excess water before wiping equipment.
9. **CTFS12TS & CTFS18TS Models only:** FOR STUBBORN DEBRIS, it may be necessary to remove antenna shield for deeper cleaning.
  - a. Unplug Oven  to stop antenna from rotating
  - b. Remove antenna shield
    - Press the front 2 tabs and pull down
    - Remove the shield by inclining at a 45 degree angle
  - c. Clean shield in warm water with mild detergent. Rinse with water.
  - d. Dry thoroughly
  - e. Reinstall shield
    - Insert shield into cavity at an angle
    - Insert the back 2 pins, then lift the front up into position
    - Push the 2 front tabs in and snap under the lip in the top of the front of the oven
  - f. Check for proper installation
    - After assembly, the 2 back pins need to be inserted through the holes, and the 2 front tabs need to be secure under the lip in the top of the front of the oven.
    - Using finger, pull downward on shield to assure all pins are engaged in cavity holes and shield is securely installed.
  - g. Reconnect power to oven.

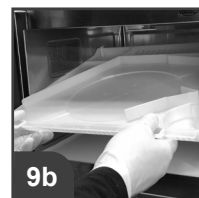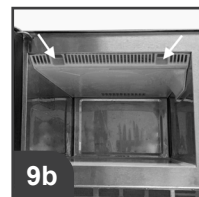



# Care and Cleaning (continued)


See previous page for detailed Daily Care and Cleaning recommendations.

## Weekly Care and Cleaning


### AIR FILTERS



Clean air intake filter weekly for proper airflow.

 **IMPORTANT:** To avoid overheating and oven damage, clean air filter regularly.


 **CAUTION:** Do NOT operate oven without filter in place.

#### CTFS12TS & CTFS18TS Models:

1. Locate the removeable air filter below the oven door.
2. Unplug Oven. 
3. Turn the thumbscrew counterclockwise until the filter is released, and remove the filter.
4. Wash filter in hot water and mild detergent. Clean with a soft brush, or clean cloth. Rinse and dry thoroughly.
5. To reinstall, place filter in position and turn the thumbscrew clockwise to tighten.

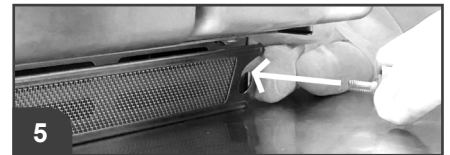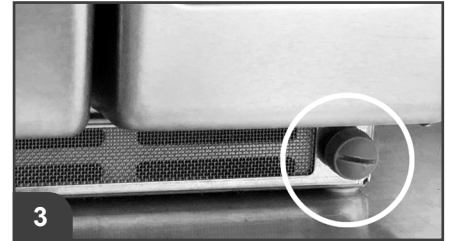

#### RCSCT10TS & RCSCT10DSE Models:

1. Locate the non-removeable air filter below the oven door.
2. Unplug Oven. 
3. Clean air vents with damp cloth to ensure proper airflow. Dry thoroughly.

## Monthly Care and Cleaning

### DISCHARGE AIR VENTS

Check monthly for a buildup of cooking vapors along intake and discharge louvers on bottom and back of oven. Clean air vents with damp cloth to ensure proper airflow. Dry thoroughly.

# Before Calling for Service

Record all inspections and repair for future reference.

## **WARNING**

To avoid electrical shock which can cause severe personal injury or death, do not remove outer case at any time. Only an authorized servicer should remove outer case.

| SYMPTOM   | POSSIBLE CAUSE   |
|---|--|
| Oven fan runs and light remains on after cook cycle has completed | Fan cools oven components. It is normal for fan to run 60 seconds  |
| Oven fan runs while oven is not cooking                           | Normal operation   |
| Oven does not operate   | Confirm oven is plugged in.<br>Check fuse or circuit breaker.<br>Confirm oven is plugged into dedicated circuit.<br>Confirm oven is on grounded and polarized circuit. Contact electrician to confirm.   |
| If oven does not accept entries when keypad is pressed            | Make sure oven is on.<br>Open and close oven door. Press keypad again.   |
| Oven malfunctions or shows "F" with a number.                     | Oven control is equipped with a self-diagnostic system. Self-diagnostic system alerts you if there is a error or problem. When electronic control signals a problem, follow steps listed below.<br>1. Record number shown.<br>2. Unplug oven, wait for 1 minute, and plug in oven. <ul style="list-style-type: none"><li>• Disconnecting electrical supply may eliminate service code. If failure continues, call for service.</li></ul> |
| Oven operates intermittently                                      | Check air filters and discharge area for obstructions  |
| Oven operates, but does not heat food                             | Place one cup cool water in oven. Heat for one minute. If water temperature does not rise, oven is operating incorrectly and a servicer should be called.  |
| "Clean Filter" displays   | This is normal and will appear for 24 hours.   |

## CONTACT INFORMATION

Any questions or to locate an authorized service provider to perform warranty service:

1. Locate the model and serial number on the service plate.
2. Call Culitek Service Support. **Phone: 1-800-436-9472**



Commercial Service  
800-436-9472

Warranty service must be performed by an authorized Culitek servicer. Culitek also recommends contacting an authorized service provider for support after warranty has expired.

For full product documentation visit:  
[culitekequipment.com](http://culitekequipment.com)